



Removing AGA Lift Table from pallet


Thank you for choosing AGA Tools & Products. We hope you enjoy your AGA Lift Table for many years to come. Scan the QR for video instructions.




Step 1: To begin the process of removing your AGA Lift Table off the pallet, place the pallet under the arms of the lift in your shop.



Step 2: Remove all screws secure metal straps on the outside only. Please note that there are 3 sections that are held down: one on the left, one on the right and one towards the front.

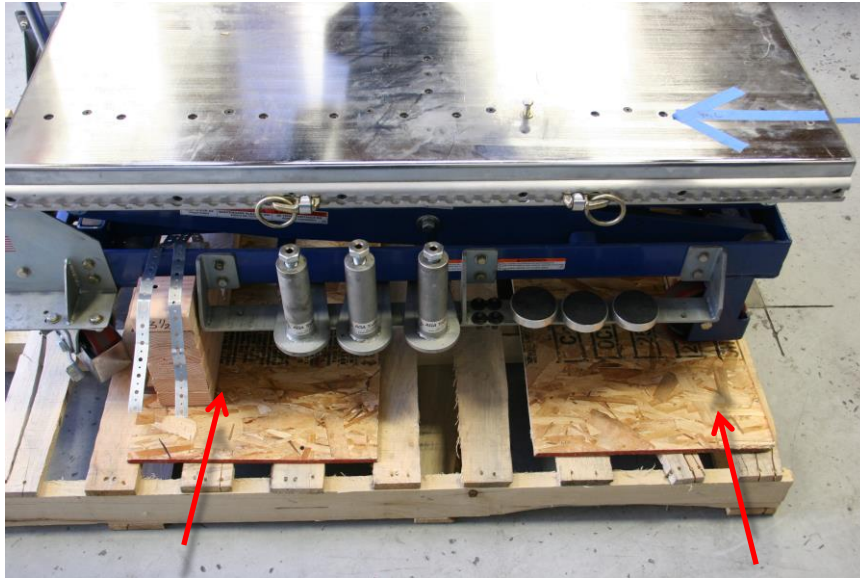


Step 3: Remove front and rear fixtures on both left and right side. Arrows shown in picture above indicate front and rear fixtures that need to be removed for removal process.

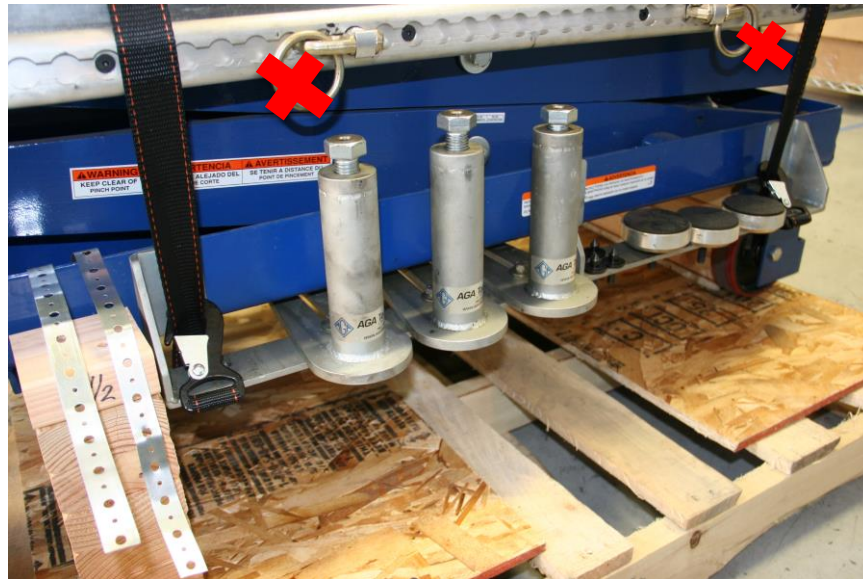

Step 4: Using the supplied ratchet straps, route them around the fixture rack as shown in picture.

Note: Do not lift the AGA Lift Table from platform or platform hooks.
Doing so will damage hydraulic cylinders.

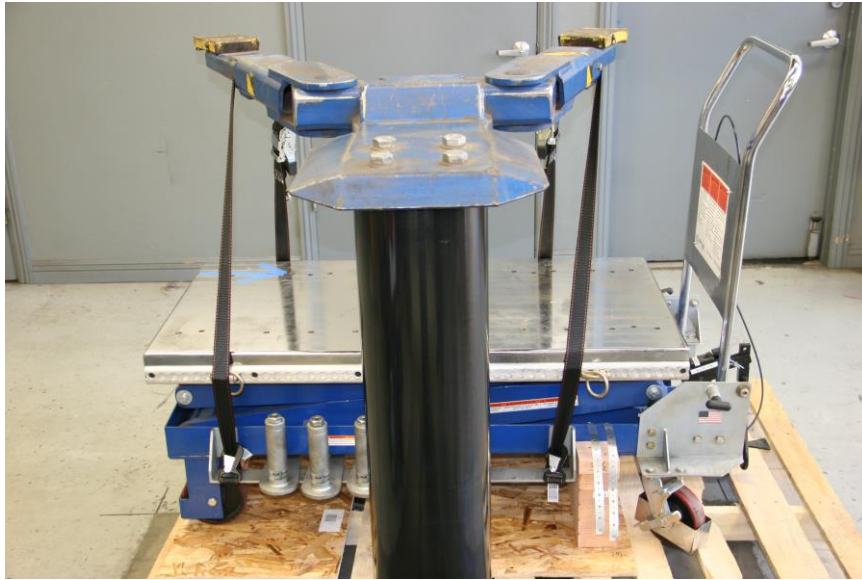

Step 5: Place straps over the arms of the lift. Adjust the ratchet straps to equal lengths.



Step 6: Raise the lift till the Lift Table has completely detached itself from the pallet. Pull pallet out. Slowly lower lift until the Lift Table is on the ground. Remove ratchet straps and reinstall fixtures that were removed in step 3.



AGA Tools
& PRODUCTS

WWW.AGATOOLS.COM

760-738-4084



Step 7: Install handle with 4 supplied 10mm bolts and washers. Torque bolts to 40Nm (30lbs).

Address
545 Corporate Dr, Escondido, CA 92029

Phone
760-738-4084

Hours
Monday - Friday 8:00 AM - 5:00 PM PST