

	TOOL USE INSTRUCTION	
	Tool Number: nct07989088	REV: 2.0
	Title: AXLE SEAL REMOVAL TOOL	DEPT: Service Engineering

Author	Peter Langel	Approver(s)	Peter Langel
---------------	--------------	--------------------	--------------

Revision Log:

REV	Revision Description (Reason for Change)	Author	Rev. Date
1.0	Initial Release	P.Langel	9/13/2021
2.0	Added images for direction of hook	P.Langel	10/25/2021

Reference

Labor Code:

421050010 Seal, Output, Rear Drive Unit, LH (Remove and Replace)

421050110 Seal, Output, Rear Drive Unit, RH (Remove and Replace)

PURPOSE: This tool is used to remove axle seals

GENERAL PRINCIPLES:

The tool consists of a hook that is capable of getting underneath the seal and releasing it. This tool requires slight alteration from stock by the user





TOOL USE INSTRUCTION

Tool Number: nct07989088

REV: 2.0

Title: AXLE SEAL REMOVAL TOOL

DEPT: Service Engineering

USING THE TOOL:

1. Depending on which side of the vehicle you are working on, the direction of the hook will need to be switched.



Tool Orientation for Driver side



Tool Orientation for passenger side

2. With the axle removed, insert the hook into the inner part of the axle seal



3. With the hook firmly engaged with the seal. Pull on the seal. This should release the seal from it's bore.



4. End Instruction