

TSN00648 (NCT08908191) - KEY, SEAT BELT ANCHOR RELEASE

Purpose:

This tool is used to disconnect the front seat belt from the anchor point




Labor Code: [721010010](#) Seat Belt, 1st Row, Driver (Remove and Replace)

General Principles:

This tool is used to disconnect the front seat belt from the anchor point

Tool Operation:

1. Install the key into the anchor attachment point

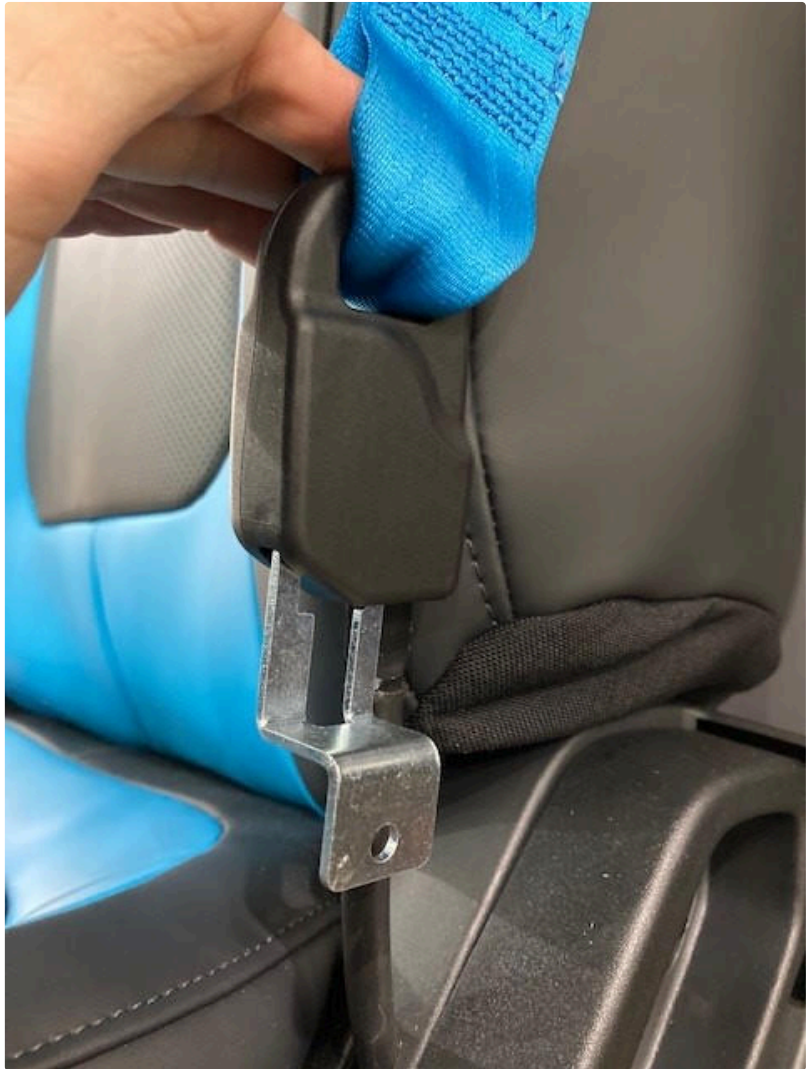

2. Push downward on the seat belt anchor attachment and push upward on the key to fully engage it



4. Release the seatbelt from the anchor point

