

WEIGHT CAPACITY: 2,200 lbs (1,000 kg)





AIR SUPPLY: Pressure must be between 110 - 150 psi (7.5 - 10.5 bar). Air must be supplied to raise and lower the table.

To raise the table, attach air supply to pump. Press the up button on the hand held controller to raise the table up. WARNING: Always lock casters prior to raising table and do not move table when in the raised position.

WARNING: Before lowering loaded table, make sure the lowering control is in the slow/stop positioned by turning the knob all the way to the right.

With the down button pressed, adjust to desired lowering speed.

