


TSN00937-300-A RIVIAN LIFTGATE EMBLEM JIG, R1S

Purpose

To align and install the RIVIAN logo emblem on the lift-gate of R1S

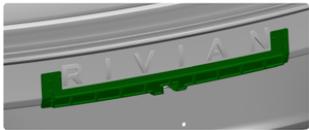

General Principles

1. Ensure paint surface is clean and free of debris before attempting to use the tool and/or installing the emblems.
2. Prep surface with IPA wipe or a similar cleaning method.
3. Perform a "dry-fit" prior to removing the emblem adhesive liner and permanently installing.

Emblem Liners



Using the Tool

Step		
1	Align the tool to rear camera and lower edges of the liftgate.	
2	Ensure the tool is making contact with the surface and bottom edges of the liftgate. Use masking tape as necessary to hold the tool in place	

3	<p>Perform a “dry-fit”. Align the emblem’s release liners to the datum pin features on the tool.</p>	
4	<p>Peel away the adhesive liner.</p> <p>Re-align the emblem to the tool and install. Apply pressure on the emblem for 30 seconds.</p>	
5	<p>Remove the release liner to reveal the installed emblem.</p>	