

TOOL USE INSTRUCTION

RIVIAN	TOOL NUMBER	TSN01701-200-A
	TITLE	M10 X 1.0 PLUG
	REV - DATE	REV A - 11/14/2025



CONTENTS

[SAFETY](#)

[TOOL USE INSTRUCTION](#)

TOOL FUNCTION

USED TO PLUG BRAKE HOSE PORTS ON EDV DURING HARD LINE AND BRAKE HOSE REPLACEMENTS.

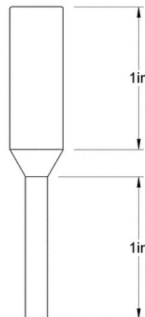

McMASTER-CARR <small>INC.</small>	<small>ICAD</small>	<small>PART NUMBER</small>	9286K83
<small>http://www.mcmaster.com</small>		<small>Pull-Through Round Plugs</small>	
<small>© 2023 McMaster-Carr Supply Company</small>			
<small>Information in this document is provided for reference only.</small>			






WARNING

Do not perform procedure if tool is damaged or missing parts. Consult the Rivian Service Tool Catalog for replacement components.

Failure to follow guidelines outlined in this document could result in injury and/or property damage.

SAFETY GUIDELINES

1	<p>PPE Required</p> <ul style="list-style-type: none">● Eye protection● Gloves / Skin protection	
----------	---	---



1

Take an M10 x 1.0 plug and push it directly inward into the threaded hole until resistance is felt.

Next, firmly twist it to drive it further into the threaded hole.

Ensure that the plug's orientation is straight as shown

